# **HC1-SHIM**

# **Bottom Loading Tripod Adapter Installation and Use Instructions**

## **Description**

This adapter is meant to allow the use of the Sony HDR-HC1 and HVR-A1 camcorders. It is not designed for any other camera.

#### Contents

Included should be a flat "C" plate with a built-in alignment pin and captive screw. The user will need a flat head screwdriver.



# Handling

When working with this or any other camera or camcorder, be sure to handle them gently. Camcorders have precise internal components that may be damaged when handled improperly. Consult the camcorder's manual for details. While working with the the camcorder, placing it on on a soft, clean pad or towel is a good idea. Using excessive force may damage parts. If the screws or parts bind such that they don't turn or fit properly, stop and check to be sure they are properly aligned.

#### Installation on the Camcorder

Position the alignment pin of the adapter to the smooth hole on the bottom of the camcorder while positioning the hold down screw into place with the allen key holding it in place through the base plate. While keeping the adapter and camera parallel, tighten down the mounting screw as tight as possible, but using only hand force.







### **Mounting on the Tripod**

Three mounting positions are found on the bottom of the adapter. Chose the one as close to the original mount location as possible while still allowing tape removal.







#### **Service**

If there are any faulty or missing parts, email <u>parts@dm-accessories.com</u> to get working parts. If it does not work for your tripod, I am willing to return the purchase price of the adapter so long as the parts are in re-sellable condition. Unfortunately, the cost of shipping is not refundable.

#### Maintenance

The aluminum plates are protected by satin black powder coat. While powder coating greatly improves durability and scratch resistance, the protection is not absolute. Should nicks and scratches appear, they could be touched up with a black marker or small amounts of hobby paint. Fingerprints can be wiped using a clean, lint-free cloth.

#### **Parts**

The captive screw is specifically designed for this SHIM and is not meant to be removed from the part. Should any parts be lost or missing on first arrival, please email parts@dm-accessories.com.

DM Accessories 4833 Cherry Valley RD Middleville MI 49333 USA

http://www.dm-accessories.com sales@dm-accessories.com

Adapter design and instructions ©2005-6 DeMaagd Accessories. Adapter and camcorder compatibility list does not necessarily constitute an endorsement of any particular brand or product, nor does it imply fitness for a particular task.

All trademarks and copyrights are property of their respective owners.